



# www.outdoorclassrooms.co.uk

Fitting notes for:- Giant Xylophone


**Pack contents:** Xylophone  
4x Beater

**Tools required for fitting:-**  
Digging Equipment  
Fixing materials

Before any digging is carried out it is important to make sure there are no existing services buried beneath the desired placement points, i.e. electric, gas, water or drainage pipes. (Look for existing manhole covers as a clue.)

Check existing plans for services.

Keep the temporary supporting boards on the legs whilst handling and manoeuvring the xylophone until the final height check and fitting. Place the xylophone where you wish to site it. Using a spade, mark closely around the legs. Move the xylophone to one side whilst digging the holes. Remove turf and place aside for later use.

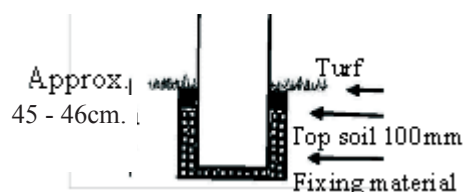

The holes should be fractionally wider in diameter than the legs and depth required for the age of children, approximately 45-65cm. Remove the temporary boards.

Carefully lower the xylophone into the holes and check to make sure the xylophone is level. Set in with appropriate materials and reinstate the turf.

For the longevity of the xylophone's decoration reapply water-based varnish if required. Varnish manufacturers recommended doing this once every five years.

If you require any further advice please contact us on 0113 2556342.

